INSTALATION GUIDE TRWS_10 & TRWS_30


Follow these step-by-step instructions to assemble the TRWS for your precipitation measurement system.

Optional: Main parts: ADAPTER **BIRD PROTECTOR** WIRE SET 1.5-2m **COVER** STAND 1/1.5/2m WINDSHIELD (TRETYAKOV/ALTER) **BUCKET** PLATE **SENSOR BASE Dimensions:** TRWS_10 TRWS_30 HTN TRWS_30 NO HTN

Installation:

Choose an open area for the rain gauge, avoiding overly windy locations. Ensure the distance from the gauge to any obstruction is at least twice the height of the obstruction above the rain gauge's orifice. The height of the orifice from the surrounding terrain should comply with local regulations, typically between 0.5 and 2 meters.


Remove the cover from the rain gauge base plate by loosening the three screws at the bottom edge. Remove the bucket from the base plate before proceeding with the mounting.

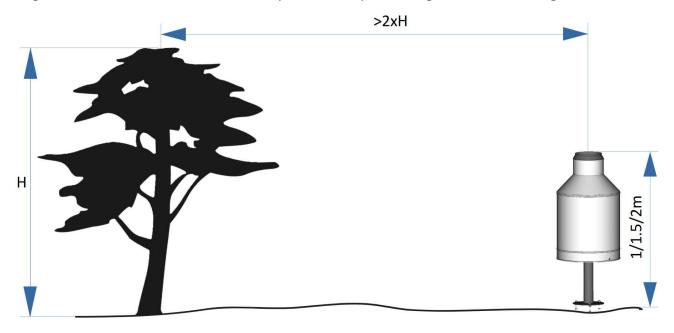


1. Mounting on a Stand:

- Prepare a stable concrete base and **attach three M8 bolts** to it (e.g., using wall plugs and hanger bolts).
- Screw three M8 nuts onto the bolts and place the lower flange of the stand on them.

 Note: The lower flange is round, while the upper one is hexagonal!

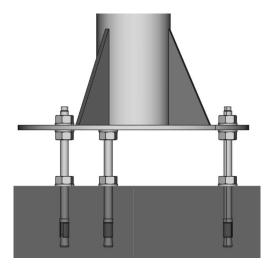


• Set the height of the stand base according to the type of rain gauge:

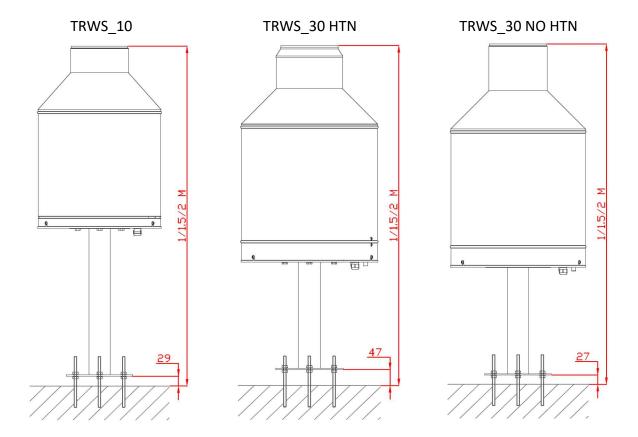


- Use a spirit level to ensure the upper (instrument) flange of the stand is level in two perpendicular directions. Once level, secure the stand with three additional nuts and washers. Do not tighten them fully at this stage.
- Attach the base to the stand using three M8 screws. Check the horizontal position of the plate with the spirit level and adjust using the lower flange nuts if necessary.
- Tighten all the nuts securely.

Note: For a 1.5 & 2m stand, we recommend using a securing wire set with 3 stainless steel cables.

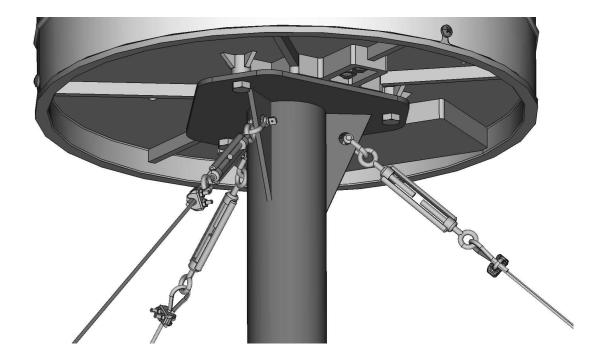


MPS - System spol. s.r.o., Pri vinohradoch 326, 831 06, Bratislava, Slovakia, www.mps-system.sk

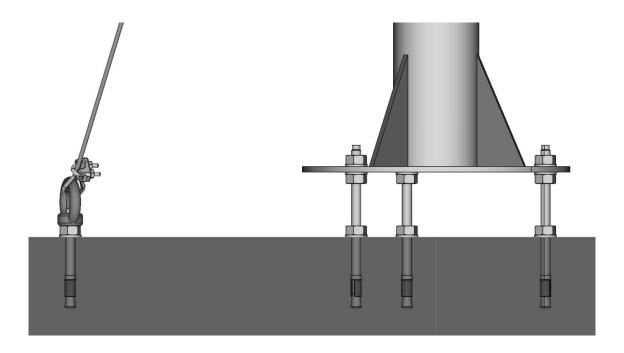

2. Mounting on a Mounting Adapter:

- Prepare a vertical pole with a diameter of 50-60 mm, securely fixed to a stable base.
- Place the mounting adapter onto the pole. Do not tighten the fixing screws yet.
- Attach the base to the adapter using three M8 screws. Level the base using a spirit level, adjusting the fixing screws of the adapter. Make sure the plate is level by placing a spirit level on all three edges.
- Once the base plate is level, tighten the mounting adapter's fixing screws securely.

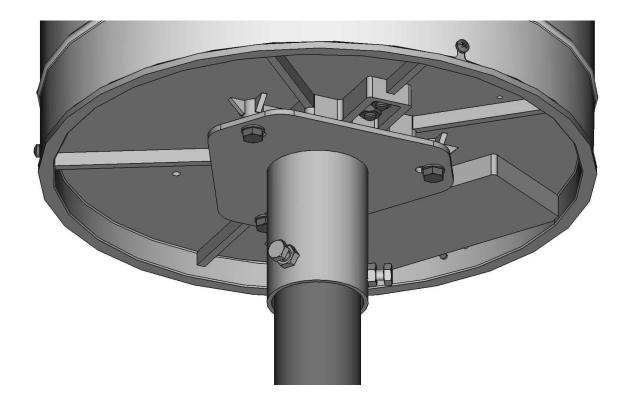


MPS - System spol. s.r.o., Pri vinohradoch 326, 831 06, Bratislava, Slovakia, www.mps-system.sk

3. Removing Transport Screws and Bracket:


The rain gauge is fitted with two transport screws and a transport bracket to protect the load cell during transport.

- Loosen both screws to create a gap of at least 1 mm between the screw tip and the gauge body.
- Remove the transport bracket.

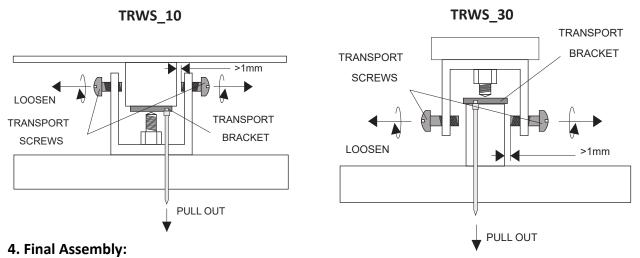


- Reattach the bucket and the enclosure.
 - Ensure the enclosure is correctly positioned: the male part of the heating connector must be plugged into the female connector located at the base plate of the rain gauge.
 - Secure the enclosure by tightening the three screws around the lower edge.
 - Use your finger to check the assembly: the bucket should not touch the enclosure.

5. Cable connection:

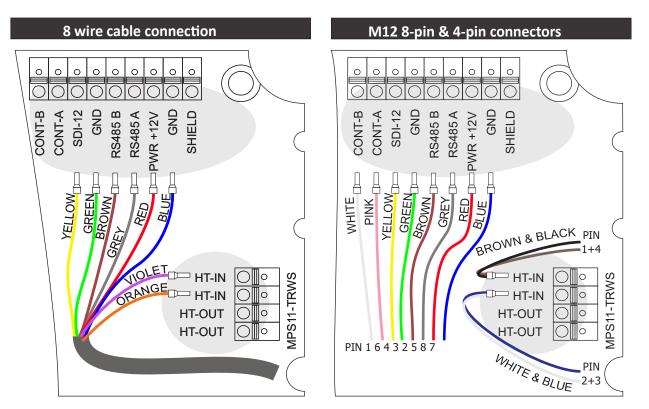

MPS - System spol. s.r.o., Pri vinohradoch 326, 831 06, Bratislava, Slovakia, www.mps-system.sk

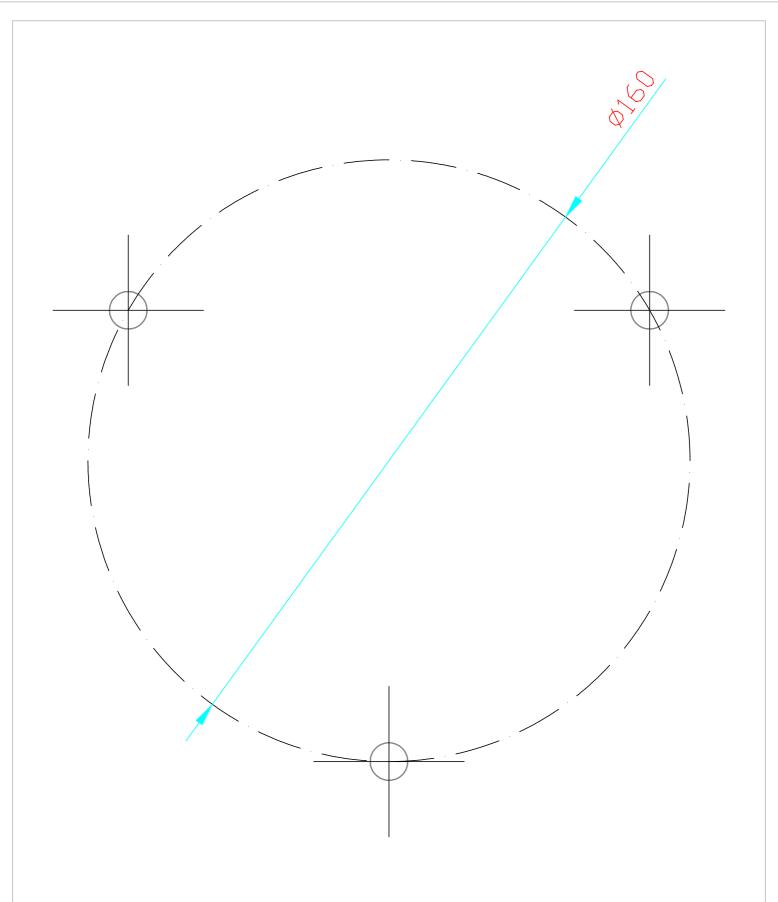

MPS - System s.r.o.	SIZE: A4
Name: TRWS_STAND	Date: 20.01.2025
Material: -	Drawing: 1/1

Type: TRWS_STAND_DRILLING_DIAGRAM

1:1